

CULTIVATORS

TINES WITH 2 X 1/2" BOLT HOLES @ 45MM CENTRES

FIND YOUR MACHINE HERE

MACHINE	POINTS SELECTION	SINGLE SHOOT BRACKETS	DUAL SHOOT FERTILISER BRACKETS	SEED BOOTS
CASE PTX 600, SHEARER 630, 800 (POST 2002) MORRIS* 9000 & 2000 (400, 550LB. TINE)	SEE BELOW	ST-SBB-2-5	ST-DPB-F2-5 (32MM O/D HOSE) OR ST-DPB-LF2-5 (38MM O/D HOSE)	ALL
FLEXICOIL 350LB. EDGE-ON		ST-SBEO-FC	ST-DPB-EO-F	
BOURGAULT, EZEE-ON, GYRAL AGBOSS HB SCARIBAR, GASON VERT. SHANK, SMALE SIMPLICITY, PSA SCARI. CONVERSIONS	SEE BELOW	ST-SBB-4	ST-DPB-F4 (32MM OD/HOSE) OR ST-DPB-LF4 (38MM OD/HOSE)	ALL

*MORRIS CONTOUR DRILLS: A COMPLETE RANGE OF POINT AND BOOT OPTIONS FOR THESE MACHINE IS AVAILABLE. REFER PAGE 7 AND 8 FOR MORE INFORMATION.



SUPER SEEDER (60MM WING) TUNGSTEN CARBIDE ON LEADING EDGE AND UNDERSIDE OF WING
PR-86DB-TW \$93.00



SUPER SEEDER (60MM WING) ANGLED TUNGSTEN CARBIDE ON LEADING EDGE AND WINGS
PR-86-DB-ATW \$96.00

DOUBLE SHOOT BOOTS

32MM O/D HOSE
ST-DPB-F2-5 \$60.00

38MM O/D HOSE 1/2" BOLT HOLES @ 45-50MM CENTRES
ST-DPB-LF2-5 \$61.00


Use the cross-bolt to position the fertiliser delivery tube for deep or shallow placement. These fertiliser boots are also popular for single shoot seeding behind shallow working points, but only when sowing at depth of working.



16MM HEAVY DUTY KNIFE
TUNGSTEN CARBIDE ON LEADING EDGE
PR-87 \$87.00

BOLTS & NUTS FOR NARROW POINTS: TWO 2 3/4" X 1/2" G8 BOLTS & NYLOCS (INCLUDES EXTRA LENGTH FOR FITTING BOOTS) TORQUE SETTING 82 NM, 60 LBFT

POINTS ARE TUNGSTEN CARBIDE TIPPED FOR EXTRA WEAR LIFE AND EXCELLENT PENETRATION

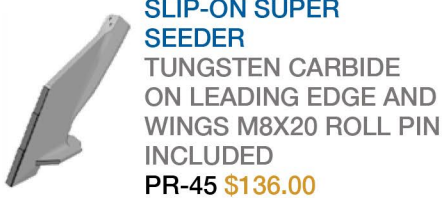

SLIP-ON SUPER SEEDER
TUNGSTEN CARBIDE ON LEADING EDGE AND WINGS M8X20 ROLL PIN INCLUDED
PR-45 \$136.00

32MM O/D HOSE 1/2" BOLT HOLES @ 45-57MM CENTRES
ST-DPB-F4 \$62.00
38MM O/D HOSE
ST-DPB-LF4 \$60.00



SLIP-ON KNIFE POINT
TUNGSTEN CARBIDE ON LEADING EDGE M8X20 ROLL PIN INCLUDED
PR-44 \$118.00



8" SWEEP H NOSE BLADE, T.C. TIPPED
PR-30-2-DB \$57.00




6" SWEEP WITH NOSE BLADE, T.C. TIPPED
PR-31-2-DB \$57.00

SINGLE SHOOT BRACKETS

ST-SBB-2-5 \$37.00

ST-SBB-4 \$37.00

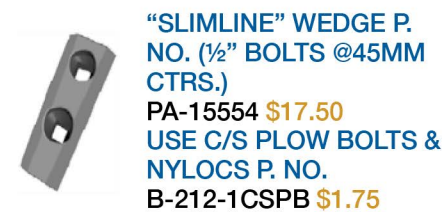

"SLIMLINE" WEDGE P. NO. (1/2" BOLTS @45MM CTRS.)
PA-15554 \$17.50
USE C/S PLOW BOLTS & NYLOCS P. NO.
B-212-1CSPB \$1.75



7 1/2" SWEEP TIPPED
PR-17-2-T \$54.00



2 1/2" RIPPER T.C. TIPPED 7/16" HOLE DIA. BACKING PLATES RECOMMENDED IF THIS POINT IS USED ON 1/2" HOLE TINES
PR-15-T \$37.00



SEED BOOT OPTIONS
SEE PAGE 15

Note: These slip-on points fit most standard wedges. We sell and recommend Agpoint wedges. Ensure your wedges are not too long to allow fitment of the roll-pin, which is essential to prevent loss of the point. Knock roll-pin through point to remove.